

SETTING/CHECKING RF2000BP FREQUENCY

ATTENTION: To properly set your new RF2000BP frequency, remove battery cover and locate dipswitches.

(See illustration located at right)

SWITCH FUNCTIONS


First row of 4 dipswitches sets tone.

Second row of 8 dipswitches sets frequency

NOTE:

1 = down

0 = up

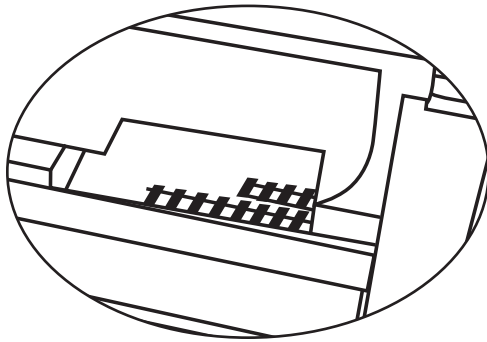

FREQUENCY SETTINGS

FREQUENCY	SWITCH SETTINGS
M2/M1	01010011
M2/M8	01011000
M6/M4	10010100
M7/M3	00101001
M7/M40	00101100
M9/M8	10101000
M9/M27	10101010
M11/M5	00011101
M11/M27	00011010
M12/M37	11101011
M12/M41	11100101
M15/M39	01000111
M16/M38	11111111
M17/M39	01110111
M18/M39	10110111
M19/M25	00110001
M20/M40	11011100
M21/M40	00001100
M24/M37	01101011
M26/M8	10001000

tone SETTINGS

tone	SWITCH SETTINGS
T7	000
T8	100
T9	010
T10	110
T11	001

Note: 4th Switch on top row IS NOT used in switch setting.



www.rftechno.com