



Timer

PREVENTIVE MAINTENANCE

System 30

Daypart Times And Display Entries

- ▶ The System 30 has up to 12 possible daypart periods numbered 1 through 12. You may use as many of the dayparts as you want. You do not have to set them all. Enter a 0 for any Daypart that is to be turned off.
- ▶ Daypart time entered will apply to EVERY day of the week.
- ▶ Daypart #1 cannot start before the earliest open time entered in the Store Hour display.
- ▶ Gaps in Daypart **times are not permitted**.
- ▶ The last programmed Daypart will end at the closing time entered in the Store Hours schedule.
- ▶ The first display used to set Dayparts 1-4

```
Set Up Dayparts(pl)
01=07:30A  02=09:00A
03=11:30A  04=01:30P
Press # Keys & Enter
```

- ▶ Use the number keys to enter the Start times for each Daypart. The time can be 12:00 AM through 11:59 PM. **NOTE: A Daypart can overlap midnight. Enter the correct time. The system will track the date correctly.**
- ▶ Press ENTER or arrow to move to the next field. Press + or - to set the time as AM or PM.
- ▶ Enter 00:00 and press ENTER for any Daypart that will be set to Off. The display will show Off when ENTER is pressed.
- ▶ Press ENTER or arrow after each entry to move to the next field or display. Fill in the Start time for each of these Dayparts (5-8)
- ▶ If the system loses its memory, the LOW BATTERY display will appear. The Real-Time Clock Module on the main circuit board should be replaced.