



# Battery Charger

## PREVENTIVE MAINTENANCE

- ▶ The vent screen on the back of the charger should be cleaned with a soft cloth, so air can flow freely.
- ▶ If the charger has a fan, it should be kept clean. Leave six inches of clearance behind it so air can circulate.
- ▶ Keep the battery charger on a stable surface, away from vibration and high traffic areas.
- ▶ Don't unplug the charger while a battery is in a port.
- ▶ Never use wet hands to plug in or unplug the battery charger.
- ▶ Always plug the battery charger into an outlet that has power after closing time, or else the timing charge circuit will reset.
- ▶ Keep all metal objects and coins away from the charging ports. This could short out the charger if it touches both contacts at the same time.
- ▶ Keep the charger in a clean dry place, away from heat, grease, flames, and water.
- ▶ Don't try to fix the a battery charger yourself, especially if you are going to remove the cover or tamper with the wiring.
- ▶ Unplug the battery charger and clean it monthly. Remove the batteries and spray window cleaner on a cloth and wipe down the case. Clean the port contacts with a pencil eraser or swab moistened with alcohol. Let the case and contacts dry completely. Don't spray cleaner onto case and don't use any kind of solvent for cleaning.

24 Hour Customer Service  
& Technical Support **800.598.2370**

